


PNEUMATRON

www.pneumatron.co.za

sales01@pneumatron.co.za

2/2 Industrial Direct Acting Solenoid Valve PLB22 Series, Steam/Air/Chemicals (N.C)



- Characteristics:**
1. Pilot operated piston construction with lower power consumption
 2. Seal serves longtime at steam ambient;
 3. Used for long-time working in pipeline system.

Medium: High Temperature Steam or Low Temperature Applications
Temperature: PTFE: -10°C to 200°C (with suitable coil ventilation)

Pressure: 0 to 13 Bar

Body: Stainless Steel SS316

Port Size (BSP): 1/4"

Orifice: 3mm

Coil voltages: 220VAC

Coils: Steam Coil with Lead Wire/DIN Plug, IP40
 Standard Coil Resin Encapsulated, IP65 100%ED (C14/15)

STEAM COIL



STANDARD COIL (C14)



Material:

Body: Stainless Steel 316

Seal: PTFE (Teflon)

Pilot Seat: PTFE

Armature Tube: Stainless Steel 304




Plunger: Stainless Steel 430F

Springs: SS304

Shading Rings: Stainless Steel 304

PLB22 Series - Normally Closed, with Coil

Port Size	Orifice (mm)	KV	Min Pressure	Max Pressure		Seals Material	Body Material	Valve Body	Coil
				AC (27VA)	DC (24W)				
1/4"	3	0.26	0 Bar	13 Bar	13 Bar	PTFE	SS316	PLB22SH03S02PT	

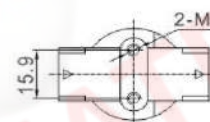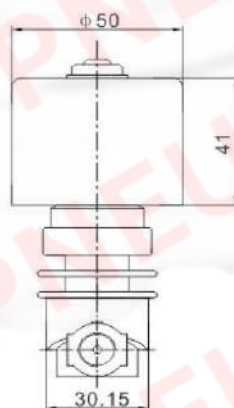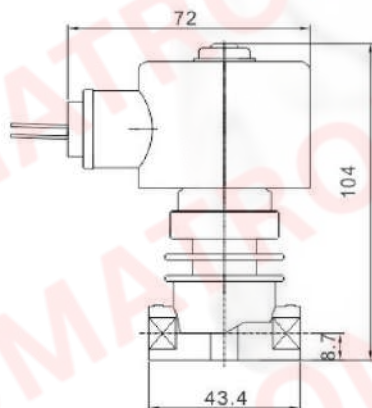


PNEUMATRON

www.pneumatron.co.za

sales01@pneumatron.co.za

2/2 Industrial Direct Acting Solenoid Valve PLB22 Series, Steam/Air/Chemicals (N.C)

DIN Plug Wiring Connections

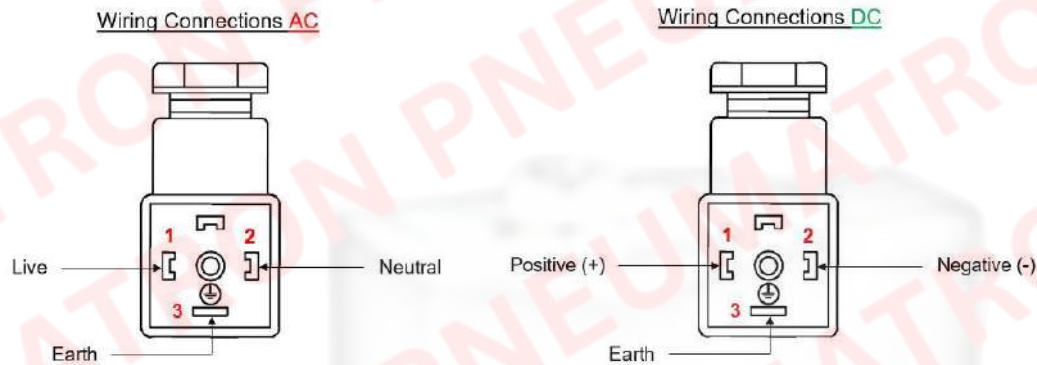

VALVE INSTALLATION INSTRUCTIONS

1. These valves should be installed horizontally with the coil on top for the best and most reliable operation, any other installation method is done at own risk.
2. No installation in direct sunlight. If the solenoid valve is installed in direct sunlight the coil and valve must be shaded - a shading steel plate can be mounted above the valve to protect it from direct sunlight. DO NOT box these valve to block direct sunlight, there will be no ventilation to keep the coil cool unless you mount a fan.
3. Insure that the valve is installed correctly as per the flow direction indicated by an arrow on the valve, in/out wording or as per instruction in the data sheet. Incorrect installation will result in malfunction of the valve and possible damage.
4. Check the valve label for pressure range requirements. Any valve should not be used for higher pressure than what they are rated for.
5. The valve label will indicate the valve body material and the seal material. Never apply incompatible fluids or gasses with the body and seal material.
6. The seal material indicates the temperature range that can be used with the valve. Going beyond the temperature range will cause the valve to malfunction.
7. All valves should be cleaned from time to time. Generally, if the voltage to the coil is correct, sluggish valve operation, excessive noise or leakage will indicate that cleaning is required.