

PNEUMATRON

www.pneumatron.co.za

sales01@pneumatron.co.za

PBVX232W Series ELECTRIC MOTOR - 2/2 Way BRASS BALL VALVE

PLEASE NOTE

There are Electronic Boards inside these valve actuators and therefore they cannot be mounted on vibrating surfaces or pipes. Mount them on a fixed surface and connect to the generator with rubber hoses.

SPECIFICATIONS:

Media: Compatible media with Brass, PTFE & EPDM.

Ambient temperature: Minus 15 to 50 Deg C

Media temperature: 2 to 95 Degrees C

Voltages: 9/24 VDC and 110/230VAC

Lower Voltage applied, Lowers Speed of movement.

(24VDC Still works at 3V, but slower)

Actuator Protection: IP62



PLEASE NOTE FOR ALL AUTO CLOSE VALVES:

Ball valve are not suitable for high frequency cycle rates, maximum 6 cycles per hour.

For ball valves sizes 1 1/4", 1 1/2" & 2" the minimum open time for Normally Closed (PVC) valves is 5 minutes, minimum close time for Normally Open (PVO) valves is 5 minutes.

1 1/4" (32mm) close and open +/- 10 seconds

Port & Orifice Size	Pressure Range	Wiring Diagram	Body
1 1/4" BSP (32 mm)	0 to 10 Bar	W52	PBVX232W52DX
1 1/4" BSP (32 mm)	0 to 10 Bar	Timer Actuator W22	PBVT232W22DX


PVX - PVC=Normally/Fail Closed, PVO=Normally/Fail Open, PVD=Detend (Depends on wiring)

DX - Describes voltage (D1=AC110-220V, D2=AC/DC9-24V)


SW	- Switch
BL	- Blue
WT	- White
YW	- Yellow
RD	- Red
GR	- Green
BK	- Black
GY	- Gray

Wiring options:

W52 - (5 Wire Control with feedback)

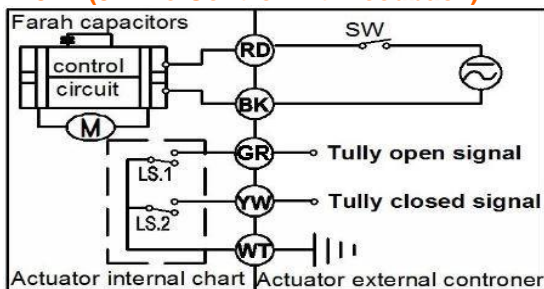

W22 - Timer Actuator

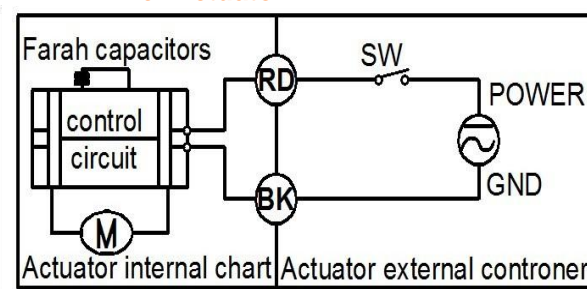

SW is closed, the valve opens. Actuator switches off automatically when ball valve is completely open.

SW is open, the valve closes. Actuator switches off automatically when ball valve is completely closed.

GR & WT connects to signal when the valve is fully open.

YW & WT connects to signal when the valve is fully closed.

SW is closed, the valve opens. Actuator switches off automatically when ball valve is completely open.


SW is open, the valve closes. Actuator switches off automatically when ball valve is completely closed.

PNEUMATRON

www.pneumatron.co.za

sales01@pneumatron.co.za

Dimensions

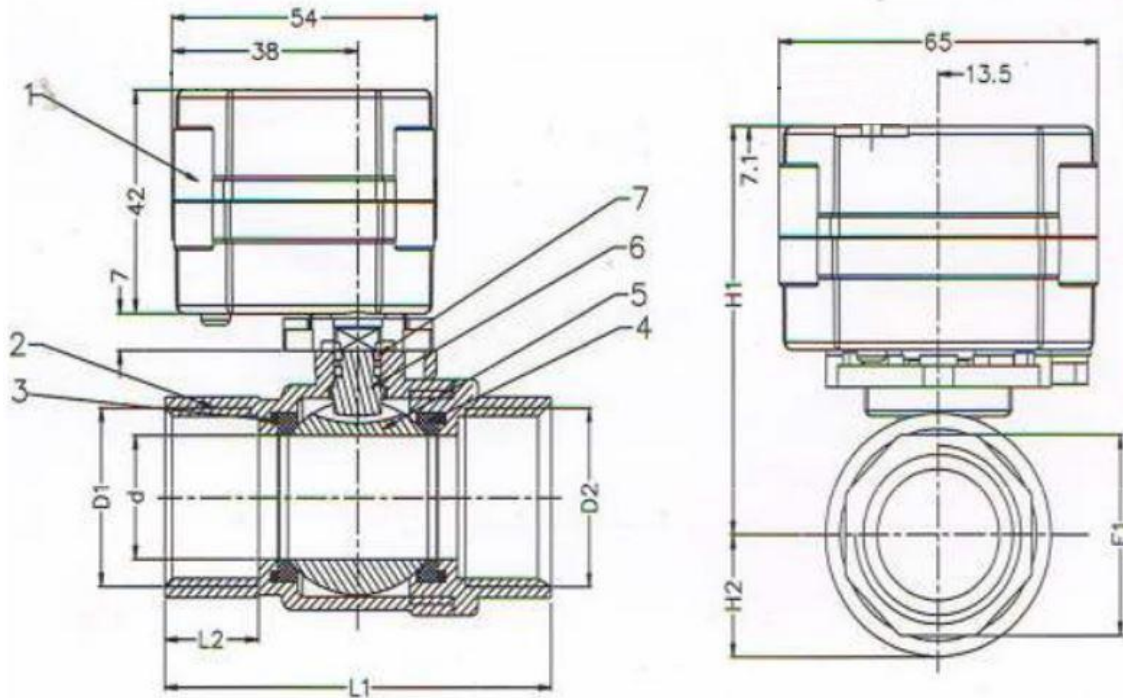


BODY DIMENSION CODE(Size in mm)						
Valve body	D1/D2	L1	L2	E1	H1	H2
PBVX232WXXDX	1 1/4" (32mm)	79	15	46	104	26

PNEUMATRON

www.pneumatron.co.za

sales01@pneumatron.co.za


Timer Specifications

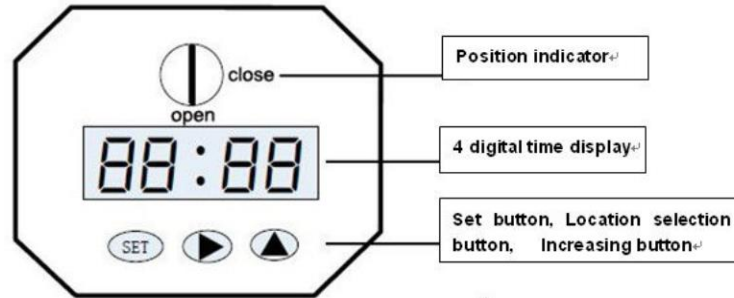

Operation Instructions:

Actuator parameter setting has two menu structures:

- Function code (First Menu)
- Setting the parameters of the function code (Secondary Menu)

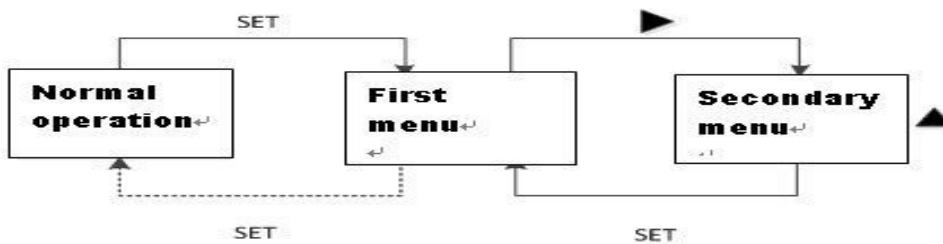

Secondary menu operation menu


Function code	Content	Value	Unit	Remarks
t on	valve keeping open time	00:00:00 - 99:59:99	H:M:S	
toFF	valve keeping closed time	00:00:00 - 99:59:99	H:M:S	
PonS	Power-on Action	On/oFF		
Prot	Stall current setting	0-599	MA	When the current is bigger than the setting value 1.6s, the motor will stop working and the display will show Err.

PNEUMATRON


www.pneumatron.co.za

sales01@pneumatron.co.za

Parameter function control table

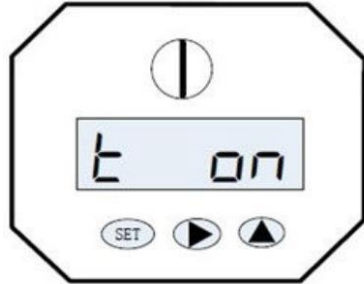

Picture 1

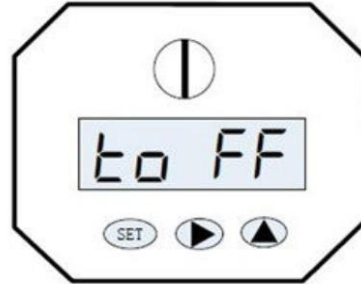

picture 2

1. Press **SET** or 2 seconds to enter First menu. In First menu the screen will display as in Picture 1 (t on), indicating enter to set the valve keeping open state

Press **SET** again, the screen will now display as in Picture 2 (toFF), indicating enter to set the valve keeping closed state.



Picture 3



picture 4

2. Then press **▶** after entering the setting state, showing the valve keeping time for setting. (Set the valve keeping open time in the 't on' state and set the valve keeping closed state in the 'toFF' state).

Select flashing bit by pressing **▶** change numerical parts by pressing **▲**

When ':' is flashing, indicate setting "HS (hours):MS (minutes)", change the flashing bit by pressing **▶**


When the ':' is bright, indicate setting "MS (minutes):SS (seconds)". The data will be deposited in the valve controller after completing the setting.

Press **SET** when finish setting, will return to first menu, press **SET** again, enter to next first menu to set parameters.


PNEUMATRON

www.pneumatron.co.za



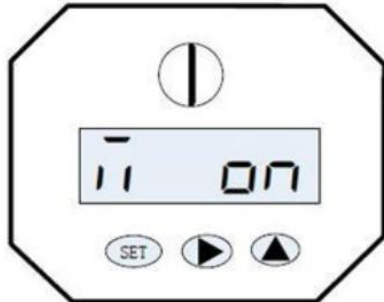


sales01@pneumatron.co.za

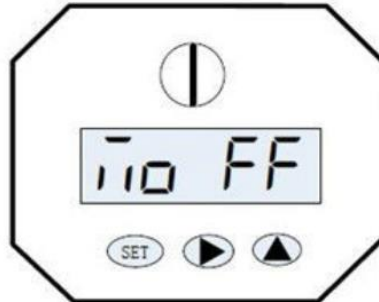

Picture 5



picture 6

3. Press **SET** &  the screen will display as in Picture 5, indicating open the valve manually.
Press the **SET** &  the screen will display as in Picture 6, indicating close the valve manually.
To exit manual mode press    **SET**



Picture 7



picture 8

4. In the normal working state, the displayed time is the valve keeping open or closed time. (e.g. Valve keeping open time is 10s, it will count down 10s)

The ':' is flashing, indicating the "HS (hours):MS (minutes)"

The ':' is bright, indicating the "MS (minutes):SS (seconds)"

Stalling protection function

When the actuator detects stalling, it will run in reverse direction. When it reaches the position to open or close, it will do the open or close action again. Meanwhile displaying 0000-0001 flashing on the screen (indicating the current retrying times). When it fails at the third retrying, the valve will stop and display ERRL on the screen.